

Power Supply Modbus RTU Interface
Programmer
Power MBLink v1.3
for SR...*Hi*...485+ models

Please download software for Modbus RTU from:

<https://www.heliosps.co.nz/sr-s-srhi-srhl-downloads/> and go to “Serial Modbus RTU downloads”

TABLE OF CONTENTS

TABLE OF CONTENTS	2
INTRODUCTION	3
SERIAL MODBUS RTU PROTOCOL	4
COMMUNICATION SETTINGS	5
MODBUS REGISTER SET (MODBUS FUNCTIONS 3, 6, 15 & 22)	6
GENERAL	6
DIGITAL MONITORING	6
<i>Revised Digital Monitoring Bits</i>	6
<i>Original Digital Monitoring Bits</i>	7
DIGITAL CONTROL.....	8
ANALOGUE PARAMETERS	8
ANALOGUE SETTINGS	9
MODBUS COIL (BIT) SET (MODBUS FUNCTIONS 1, 5 & 15)	10
MONITORING.....	10
<i>Revised Digital Monitoring Bits</i>	10
<i>Original Digital Monitoring Bits</i>	11
CONTROL.....	12
CONNECTION PIN OUTS	13
REVISION HISTORY	14

INTRODUCTION

The 'Power MBLink' software is used to configure the Modbus address and baud rate of the interface. Also it is a useful tool to monitor real time the various Innovative Energies power supply parameters via the Modbus port.

The screenshot displays the 'Power MBLink v1.0' software interface, titled 'Innovative Energies - Power Supply - Modbus Interface Programmer'. The interface is divided into several sections:

- Power Supply Variables:** Shows real-time data for Output Voltage (13.9 Volts), Battery Current (00.5 Amps), Power Supply Current (01.0 Amps), and Battery Temperature (16.0 DegC).
- Status:** A grid of indicators including Normal Operation, Battery Present, Battery OK (Pwr Fail), Battery Charging, Batt. Condition Test, BCT Enabled, Retry BCT on Fail, Battery Discharging, Batt in Good Cond., BCT Enable Ack, BCT Disable Ack, BCT Start Ack, and BCT Stop Ack.
- Alarms:** A grid of indicators including Mains Failure, Possible M/PSU Fail, Batt in Bad Cond., Comms to PSU Fail, Overload, System Down, Battery Missing, and Battery Low. A 'Poss. Batt Missing' indicator is also present.
- Communication:** Includes a dropdown for Address (set to 1), buttons for Single Update, Continuous Update, and Stop Update, and a Watchdog field set to 1436.
- Battery Condition Test:** Includes buttons for Start BCT, Stop BCT, BCT Enable, and BCT Disable.
- Notice:** A table with columns for Code, Type, and Description. The current notice is Code: 03006, Type: Notice, Description: Updating Information From Device With Address 1.

© 2008 DoZeener Controls

SERIAL MODBUS RTU PROTOCOL

- 01 – Read Coil Status
- 03 – Read Holding Registers
- 05 – Force Single Coil
- 06 – Preset Single Register
- 15 – Force Multiple Coils
- 16 – Preset Multiple Registers
- 22 – Mask Write 4X Register

A maximum of 80 coils can be polled at one time using function 1

A maximum of 32 registers can be polled at one time using function 03

A maximum of 5 registers can be preset at one time using function 06

A maximum of 32 coils can be preset at one time using function 15

Modbus ASCII Mode is not supported.

DEFAULT COMMUNICATION PARAMETERS

- Modbus address 1
- Baud rate 9600
- No parity
- 8 data bits and
- 1 stop bit

COMMUNICATION SETTINGS

The communication parameters of the protocol converter can be changed via the software “Power MBLink”

The following Baud Rate Settings are possible:

- 9600
- 14400
- 19200
- 38400
- 5600
- 57600
- 115200

The Modbus slave device also can be changed via the software

Parity can be changed to None, Odd, Even, Space and Mark only to models released after November 2009.

The Data Bits and Stop Bits cannot be changed and are set as 8 and 1 respectively.

MODBUS REGISTER SET (MODBUS FUNCTIONS 3, 6, 15 & 22)

GENERAL

Reference	Modbus Address	Description	Type	Read/Write
Watchdog	40001	Watchdog	Register	R

DIGITAL MONITORING

REVISED DIGITAL MONITORING BITS

Modbus Address	Description	Type	Read/Write
BCT Related Digitals			
40008:1	BCT Active	Bit	R
40008:2	BCT Status(Enabled/Disabled)	Bit	R
40008:3	BCT Start (Acknowledge)	Bit	R
40008:4	BCT Stop (Acknowledge)	Bit	R
40008:5	BCT Enable (Acknowledge)	Bit	R
40008:6	BCT Disable (Acknowledge)	Bit	R
Information Digitals			
40009:1	Charge Cycle	Bit	R
40009:2	Battery Ok	Bit	R
40009:3	Battery Present	Bit	R
40009:4	Battery Possibly Missing	Bit	R
40009:5	Possible Mains Fail (Brown Out)	Bit	R
40009:6	Battery Sign (Set for Negative/Discharge)	Bit	R
40009:7	Temperature Sign (Set for Negative)	Bit	R
40009:8	Retry Battery Test on Fail	Bit	R
Alarm Digitals			
40010:1	Battery Bad	Bit	R
40010:2	Battery Missing	Bit	R
40010:3	Overload	Bit	R
40010:4	Communications Fail to Power Supply	Bit	R
40010:5	System Down	Bit	R
40010:6	Battery Low	Bit	R
40010:7	Mains Failure	Bit	R

ORIGINAL DIGITAL MONITORING BITS

The following registers have been replaced with the ones in section 'REVISED DIGITAL MONITORING BITS'. The digital values in this section provide the same information as the revised ones but have a different interpretation.

It is recommended that these registers are not used for new applications.

Reference	Modbus Address	Description	Type	Read/Write
CC	40011:1	Charge Cycle (Normal Operation)	Bit	R
OL	40011:2	Overload	Bit	R
MF	40011:3	Mains Failure	Bit	R
BCT	40011:4	Battery Condition Test	Bit	R
BP	40011:5	Battery Present	Bit	R
BM	40011:6	Battery Missing	Bit	R
BL	40011:7	Battery Low	Bit	R
BB	40011:8	Battery Bad	Bit	R
M?	40011:9	Power Supply or Mains Failed (Brown Out)	Bit	R
B?	40011:10	Possibly Battery Missing	Bit	R
SD	40011:11	System Down	Bit	R
BO	40011:12	Battery OK during mains/psu fail	Bit	R
Bcond	40011:13	Battery Condition Test Enabled	Bit	R
Ret	40011:14	Retry Battery Test on Fail	Bit	R
TempSign	40011:15	Temperature Sign (1 = Negative, 0 = Positive)	Bit	R
BatSign	40011:16	Battery Current Sign (1 = Out, = 0 In)	Bit	R
BCT Start	40012:1	Battery Condition Test Started	Bit	R
BCT Stop	40012:2	Battery Condition Test Stopped	Bit	R
BCT Enable	40012:3	Battery Condition Test Enabled	Bit	R
BCT Disable	40012:4	Battery Condition Test Disabled	Bit	R
CommsF	40012:5	Communications Failure to Power Supply	Bit	R
b?	40012:9	Possibly Battery Missing (Battery Bad)	Bit	R
bM	40012:10	Battery Missing (Battery Bad)	Bit	R
bO	40012:11	Battery OK during mains/psu fail (Battery Bad)	Bit	R
bL	40012:12	Battery Low (Battery Bad)	Bit	R
bP	40012:13	Battery Present (Battery Bad)	Bit	R

DIGITAL CONTROL

Reference	Modbus Address	Description	Type	Read/Write
BCT Start	40013:1	Start Battery Condition Test	Bit	R/W
BCT Stop	40013:2	Stop Battery Condition Test	Bit	R/W
BCT Enable	40013:3	Enable Battery Condition Test	Bit	R/W
BCT Disable	40013:4	Disable Battery Condition Test	Bit	R/W

ANALOGUE PARAMETERS

Reference	Modbus Address	Description	Type	Read/Write
Vout	40014	Output Voltage (Scaled 1:10; 245 = 24.5 Volts)	Register	R
Ibat	40015	Battery Current (Scaled 1:10; 123 = 12.3 Amps)	Register	R
Ipsu	40016	Power Supply Current (Scaled 1:10; 123 = 12.3 Amps)	Register	R
Temp	40017	Temperature (in DegC)	Register	R

ANALOGUE SETTINGS

Reference	Modbus Address	Description	Type	Read/Write
BatDetect	40018	Time in minutes between battery detect tests (in mins)	Register	R
Vpres	40019	Minimum voltage to detect battery presence (Scaled 1:10 in Volts)	Register	R
Vshutd	40020	Shutdown Voltage (Scaled 1:10 in Volts)	Register	R
Vbatl	40021	Battery low alarm voltage level (Scaled 1:10 in Volts)	Register	R
Vdisco	40022	Battery disconnect voltage (Scaled 1:10 in Volts)	Register	R
Bccl	40023	Battery charge current limit (Scaled 1:10 in Amps)	Register	R
BCTim	40024	Length of battery condition test (in mins)	Register	R
CC Mins	40025	Time interval between BCTs (in mins)	Register	R
CC Hrs	40026	Time interval between BCTs (in hours)	Register	R
CC Days	40027	Time interval between BCTs (in days)	Register	R
MfiBCT	40028	Mains fail check interval during BCT (in mins)	Register	R

MODBUS COIL (BIT) SET (MODBUS FUNCTIONS 1, 5 & 15)

MONITORING

REVISED DIGITAL MONITORING BITS

Modbus Address	Description	Type	Read/Write
BCT Related Digitals			
00030	BCT Active	Bit	R
00031	BCT Status(Enabled/Disabled)	Bit	R
00032	BCT Start (Acknowledge)	Bit	R
00033	BCT Stop (Acknowledge)	Bit	R
00034	BCT Enable (Acknowledge)	Bit	R
00035	BCT Disable (Acknowledge)	Bit	R
Information Digitals			
00036	Charge Cycle (Normal Operation)	Bit	R
00037	Battery Ok	Bit	R
00038	Battery Present	Bit	R
00039	Battery Possibly Missing	Bit	R
00040	Possible Mains Fail (Brown Out)	Bit	R
00041	Battery Sign (Set for Negative/Discharge)	Bit	R
00042	Temperature Sign (Set for Negative)	Bit	R
00043	Retry Battery Test on Fail	Bit	R
Alarm Digitals			
00044	Battery Bad	Bit	R
00045	Battery Missing	Bit	R
00046	Overload	Bit	R
00047	Communications Fail to Power Supply	Bit	R
00048	System Down	Bit	R
00049	Battery Low	Bit	R
00050	Mains Failure	Bit	R

ORIGINAL DIGITAL MONITORING BITS

The following coils have been replaced with the ones in section 'REVISED DIGITAL MONITORING BITS'. The digital values in this section provide the same information as the revised ones but have a different interpretation.

It is recommended that these coils are not used for new applications.

Reference	Modbus Address	Description	Type	Read/Write
CC	00001	Charge Cycle (Normal Operation)	Bit	R
OL	00002	Overload	Bit	R
MF	00003	Mains Failure	Bit	R
BCT	00004	Battery Condition Test	Bit	R
BP	00005	Battery Present	Bit	R
BM	00006	Battery Missing	Bit	R
BL	00007	Battery Low	Bit	R
BB	00008	Battery Bad	Bit	R
M?	00009	Power Supply or Mains Failed (Brown Out)	Bit	R
B?	00010	Possibly Battery Missing	Bit	R
SD	00011	System Down	Bit	R
BO	00012	Battery OK during mains/psu fail	Bit	R
Bcond	00013	Battery Condition Test Enabled	Bit	R
Ret	00014	Retry Battery Test on Fail	Bit	R
TempSign	00015	Temperature Sign (1 = Negative, 0 = Positive)	Bit	R
BatSign	00016	Battery Current Sign (1 = Out, = 0 In)	Bit	R
BCT Start	00017	Battery Condition Test Started	Bit	R
BCT Stop	00018	Battery Condition Test Stopped	Bit	R
BCT Enable	00019	Battery Condition Test Enabled	Bit	R
BCT Disable	00020	Battery Condition Test Disabled	Bit	R
CommsF	00021	Communications Failure to Power Supply	Bit	R
b?	00022	Possibly Battery Missing (Battery Bad)	Bit	R
bM	00023	Battery Missing (Battery Bad)	Bit	R
bO	00024	Battery OK during mains/psu fail (Battery Bad)	Bit	R
bL	00025	Battery Low (Battery Bad)	Bit	R
bP	00026	Battery Present (Battery Bad)	Bit	R

CONTROL

Reference	Modbus Address	Description	Type	Read/Write
BCT Start	00065	Start Battery Condition Test	Bit	R/W
BCT Stop	00066	Stop Battery Condition Test	Bit	R/W
BCT Enable	00067	Enable Battery Condition Test	Bit	R/W
BCT Disable	00068	Disable Battery Condition Test	Bit	R/W

CONNECTION PIN OUTS

RJ45 connector at SR...H.. charger/power supply.

RJ45	Cat5e/6e	Signal
1	White/Green	Data+ (A)
2	Green	Data- (B)
4	Blue	GND

REVISION HISTORY

Revision Number	Date Revised	Revised By	Description
1	10-Jun-08	RM	Initial Revision
2	16-Jun-09	RM	Reformatted Document and programming cable wiring information
3	9-Jul-10	RM	Added revised digital monitoring set





**Helios Power Solutions
Australia**

Unit 6, 2-8 South St, Rydalmere
Meadowbank, Sydney,
NSW, Australia, 2116

P: +61 2 7200 9200

Sales: sales@heliosps.com.au

Service: service@heliosps.com.au

**Helios Power Solutions
New Zealand**

3 Heremai Street,
Henderson, Auckland,
New Zealand, 0612

P: +64 9 835 0700

Sales: sales@heliosps.co.nz

Service: service@heliosps.co.nz

**Helios Power Solutions
Middle East & Asia**

168 Robinson Road,
#12-01 Capital Tower
Singapore 068912

P: +65 6871 4140

Sales: sales@heliosps.asia

Service: service@heliosps.asia